


TensionLite Plus 8' Contour 3 Sided Tower Exhibit Design 1

TensionLite Plus Contour 3 Sided Tower Exhibit Design

When you are looking for a way to draw attention and captivate your audience at a tradeshow, special event, or in a permanent environment, these TLP tension fabric architectural structures are designed to impress. Mix and match the TensionLite Plus line of towers to add architecture and drama to any event or interior space. Towers come in 12', 10' and 8' heights and 3' square/diameters at the tops and bottoms.

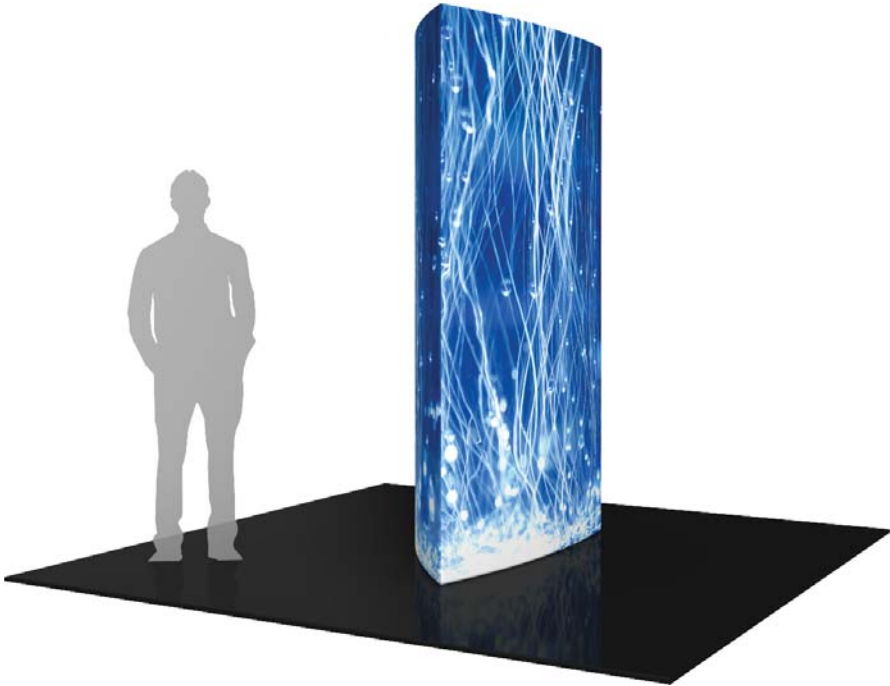

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

features and benefits:

- Premium aluminum tube frames with snap button assembly
- Easy to store and ship
- Quick to set up
- One zipper pillowcase fabric graphic
- Lifetime limited hardware warranty against manufacturer defects

dimensions:

Hardware	Graphic
Assembled unit: 35.92”w x 96”h x 59.42”d 912mm(w) x 2438mm(h) x 1509mm(d) Approximate weight with cases: 68 lbs / 30.84kgs	Refer to related graphic template for more information.
Shipping	
Packing case(s): 1 OCE Case Shipping dimensions: OCE: Expandable case length (l) may vary 40”-66”l x 18”w x 18”h 1016mm-1676mm(l) x 457mm(h) x 457mm(d) Approximate total shipping weight (includes cases & graphics): 89 lbs / 40.44kgs	additional information:
	Graphic material: dye-sublimation zipper pillowcase fabric

Included in Your Design

Tools, Components, & Connectors



ALLEN KEY SET x1



TC-30-A-110° x4




TC-30-A-60° x2



TC-30-T x1

Graphics

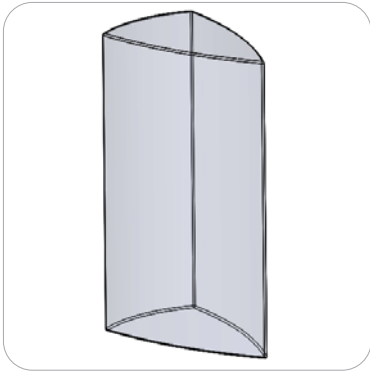

SHD-TOWER-01-G x1

Included in Your Design



SHDTOWER-01-T1 x4



SHDTOWER-01-T2 x2



SHDTOWER-01-T3 x2



SHDTOWER-01-T4 x1



SHDTOWER-01-T5 x3

Tubes



SHDTOWER-01-T6 x1



SHDTOWER-01-T7 x1




SHDTOWER-01-T8 x1

Exploded View

SHD-TOWER-01


FRAME A

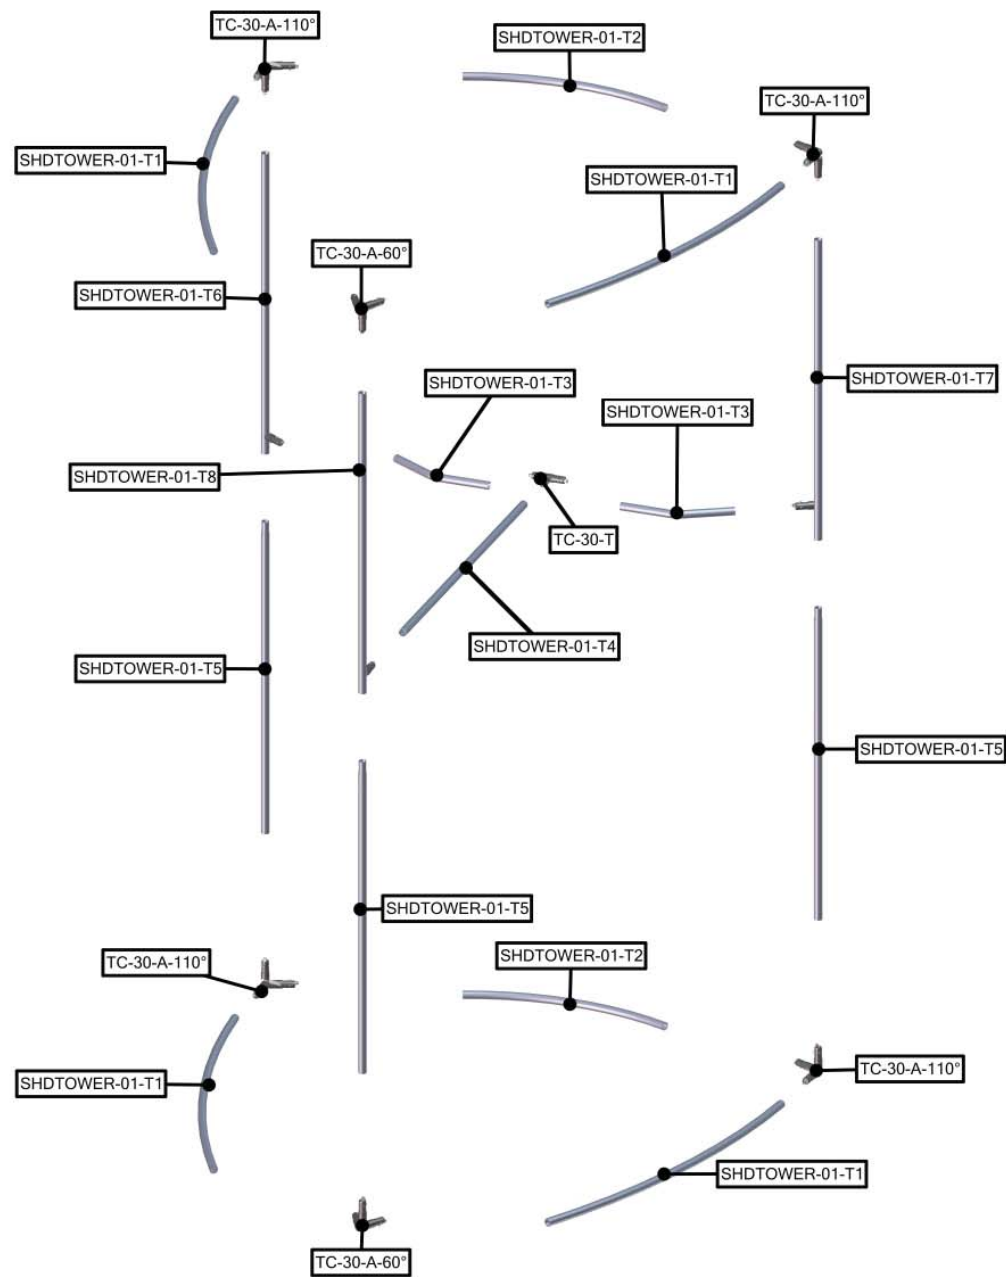

Labeling Diagram

SHD-TOWER-01


FRAME A

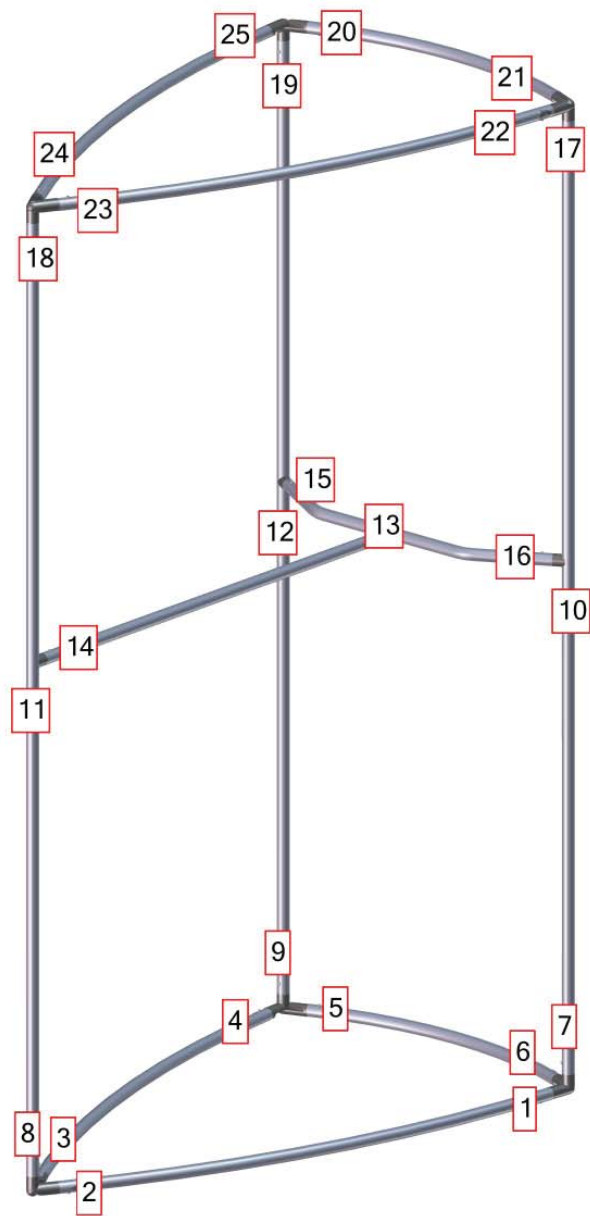

Connection Methods


Formulate® structures use a number of different yet simple connection methods. Your design will include one or more of the connection methods shown below. Steps within the Kit Assembly will reference a specific method for each connection point.

Connection Method 1: ES30 / ES50 / ES75

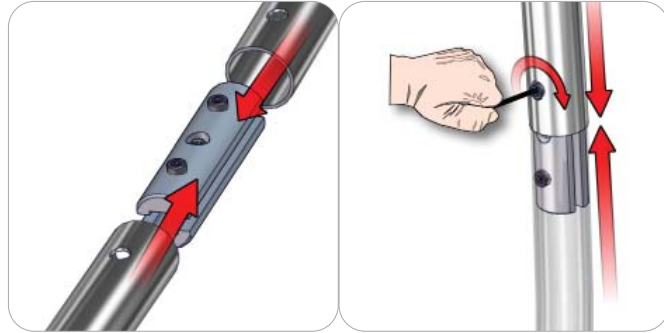


Compress the unlocked connector and slide one tube onto each end. Lock both screws carefully using your allen key tool. Be sure to lock securely, but do not overtighten.

Connection Method 2: Snap Buttons & Swage

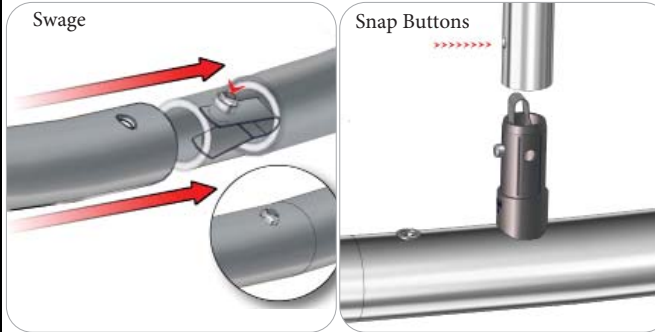

Locate the snap button on the connector or swage tube. Locate the hole on the corresponding tube. Press the snap button with your thumb and slide the tube and connector together so that the snap button snaps fully into the lock hole. To disassemble, press the snap button and pull apart.

Connection Method 3: ES30-90B / ES30-I / ES30-C

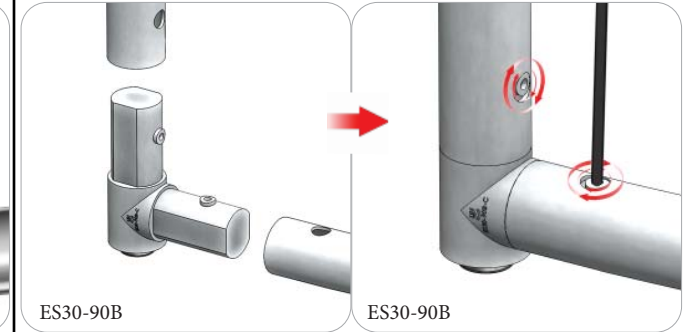

Compress one unlocked end of the connector and slide it through one tube end. Compress the other end of the connector and slide the second tube on. Lock both screws carefully using your allen key tool. Be sure to lock securely, but do not overtighten.

Connection Method 4: Tube Clamps



Be sure to fully assemble all frames before using clamps. With the clamp unlocked, place one tube of the first frame into the mouth of the clamp. Place the second tube (if applicable) into the second mouth of the clamp. With both frame's tubes in the clamp, be sure to lock securely, but do not overtighten.


Design Assembly

Step by Step

Step 1.


Gather the components necessary for assembling the frames. Lay them flat on the floor. Assemble in the order as the Labeling Diagram instructs.

Refer to Connection Method 2 for additional information.

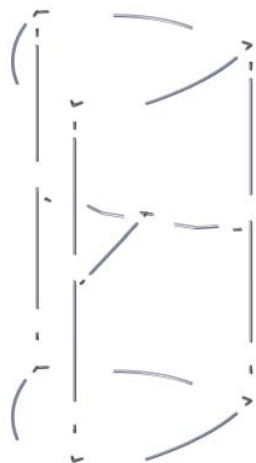

Step 2.

With frame laying flat on the floor, locate your pillowcase graphic. With the pillowcase unzipped, encase frame by covering the frame from the top to the bottom.

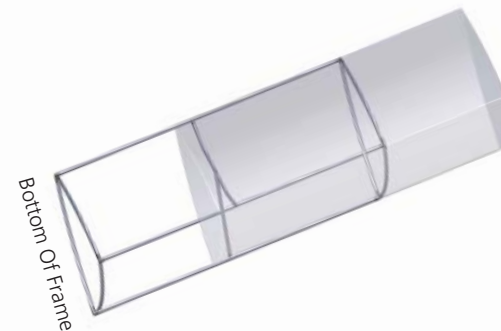

Step 3.

Zip the pillow case fabric closed.

Setup complete.

